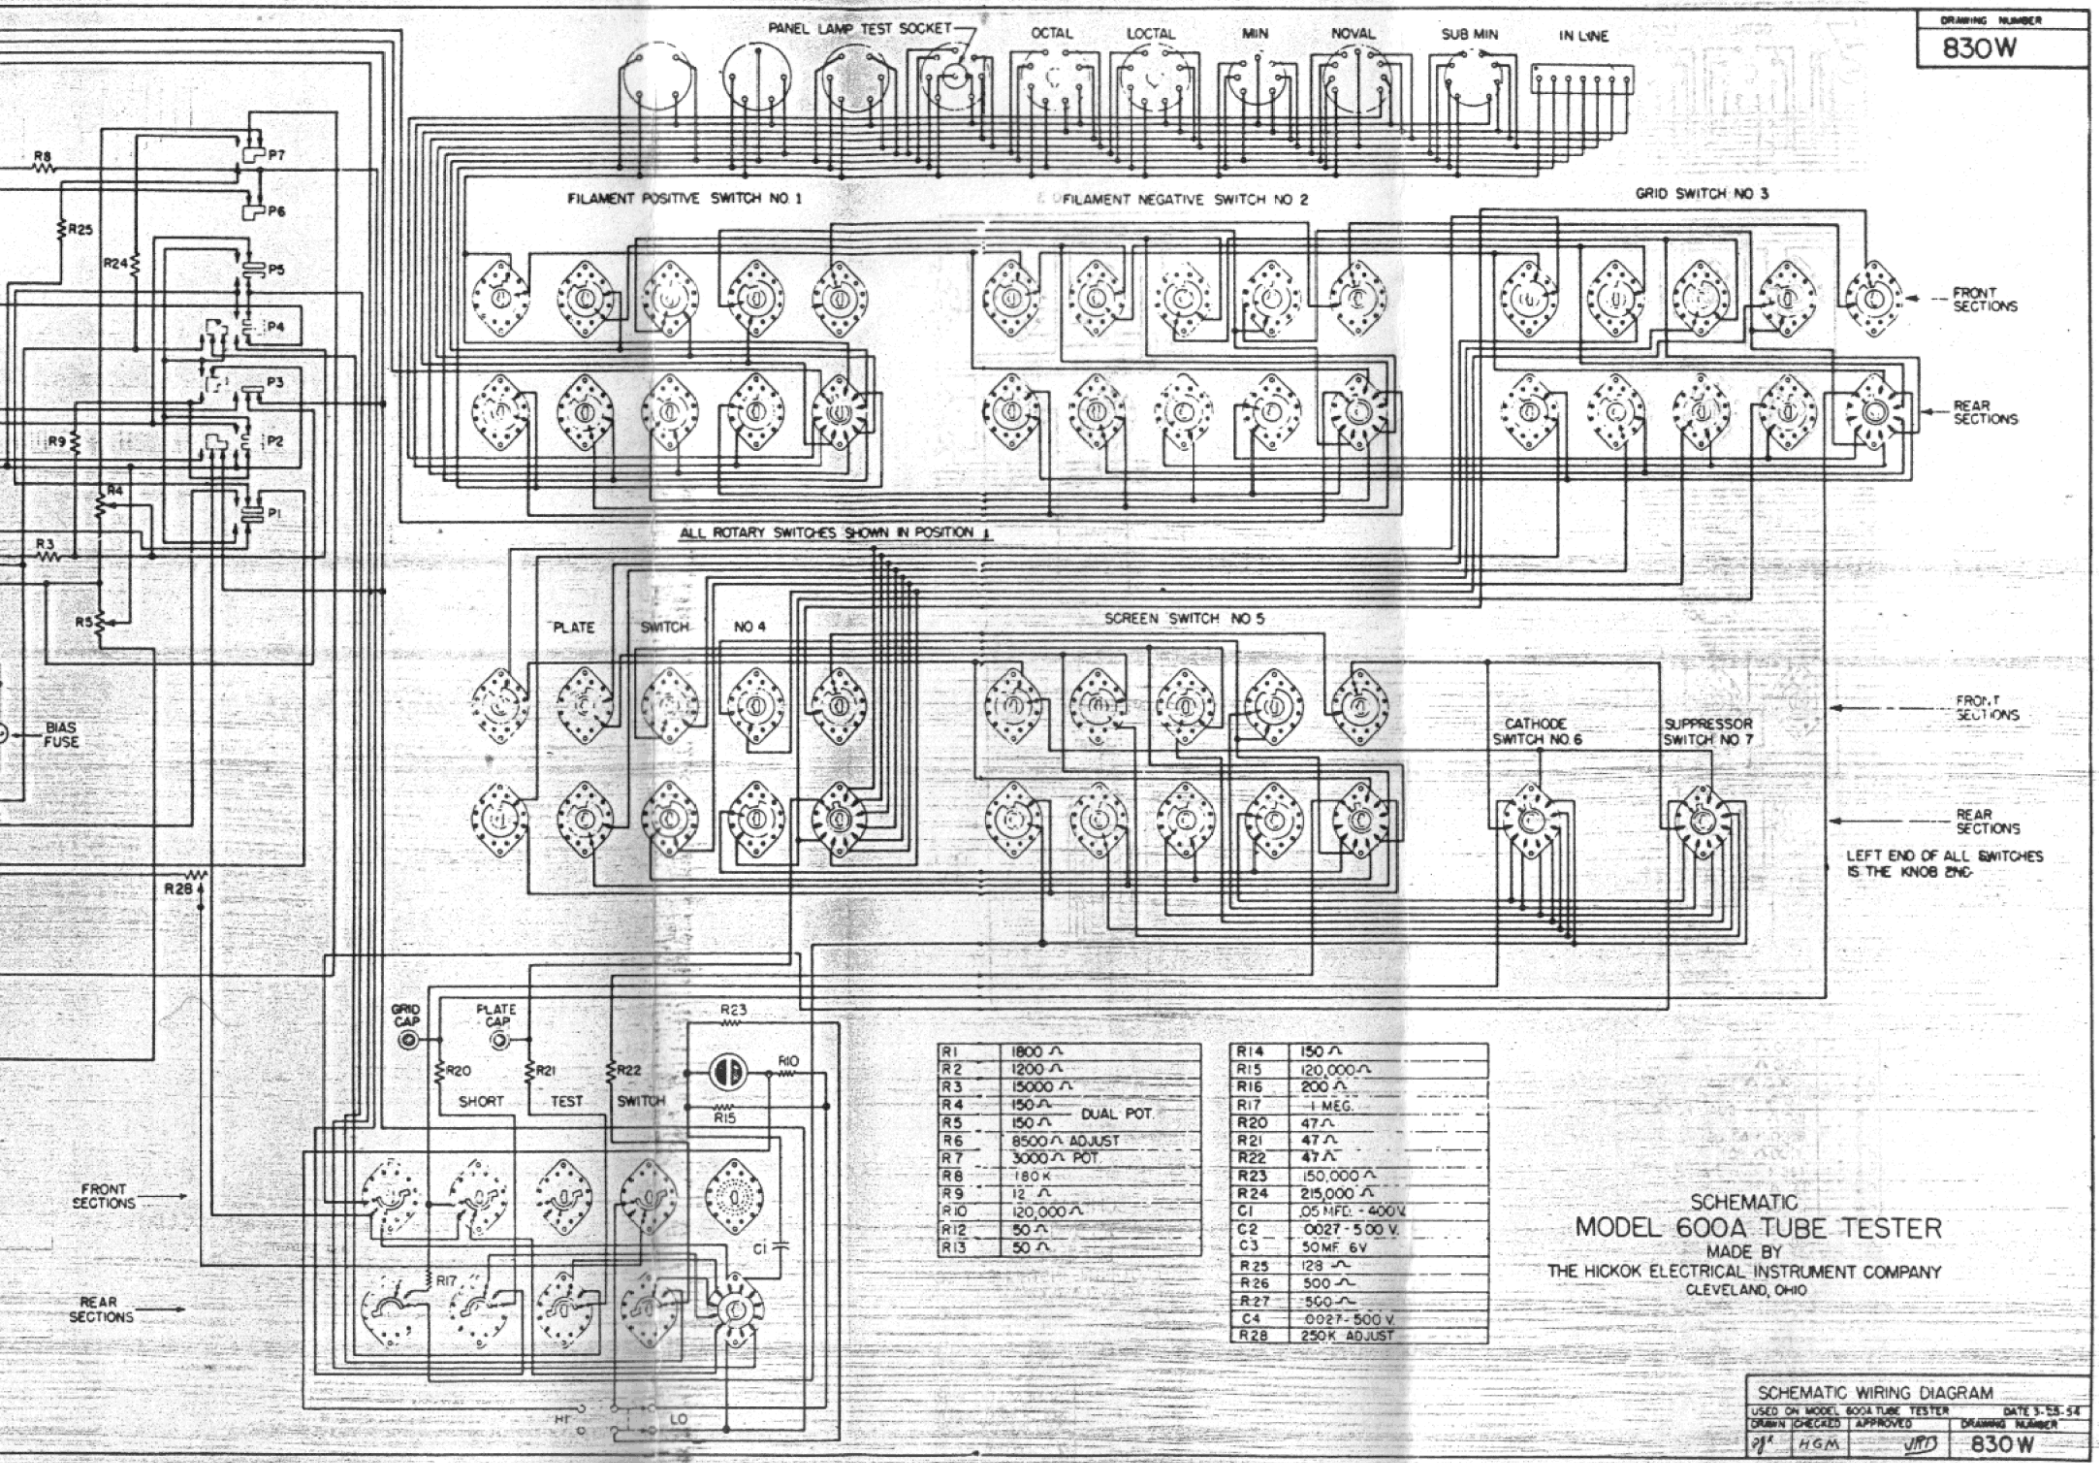

R1	1800 Ω
R2	1200 Ω
R3	15000 Ω
R4	150 Ω DUAL POT.
R5	150 Ω
R6	8500 Ω ADJUST
R7	3000 Ω POT.
R8	180 K
R9	12 Ω
R10	120,000 Ω
R12	50 Ω
R13	50 Ω

R14	150 Ω
R15	120,000 Ω
R16	200 Ω
R17	1 MEG.
R20	47 Ω
R21	47 Ω
R22	47 Ω
R23	150,000 Ω
R24	215,000 Ω
C1	.05 MFD. - 400 V.
C2	.0027 - 500 V.
C3	50 MF. 6V
R25	128 Ω
R26	500 Ω
R27	500 Ω
C4	.0027 - 500 V.
R28	250 K. ADJUST

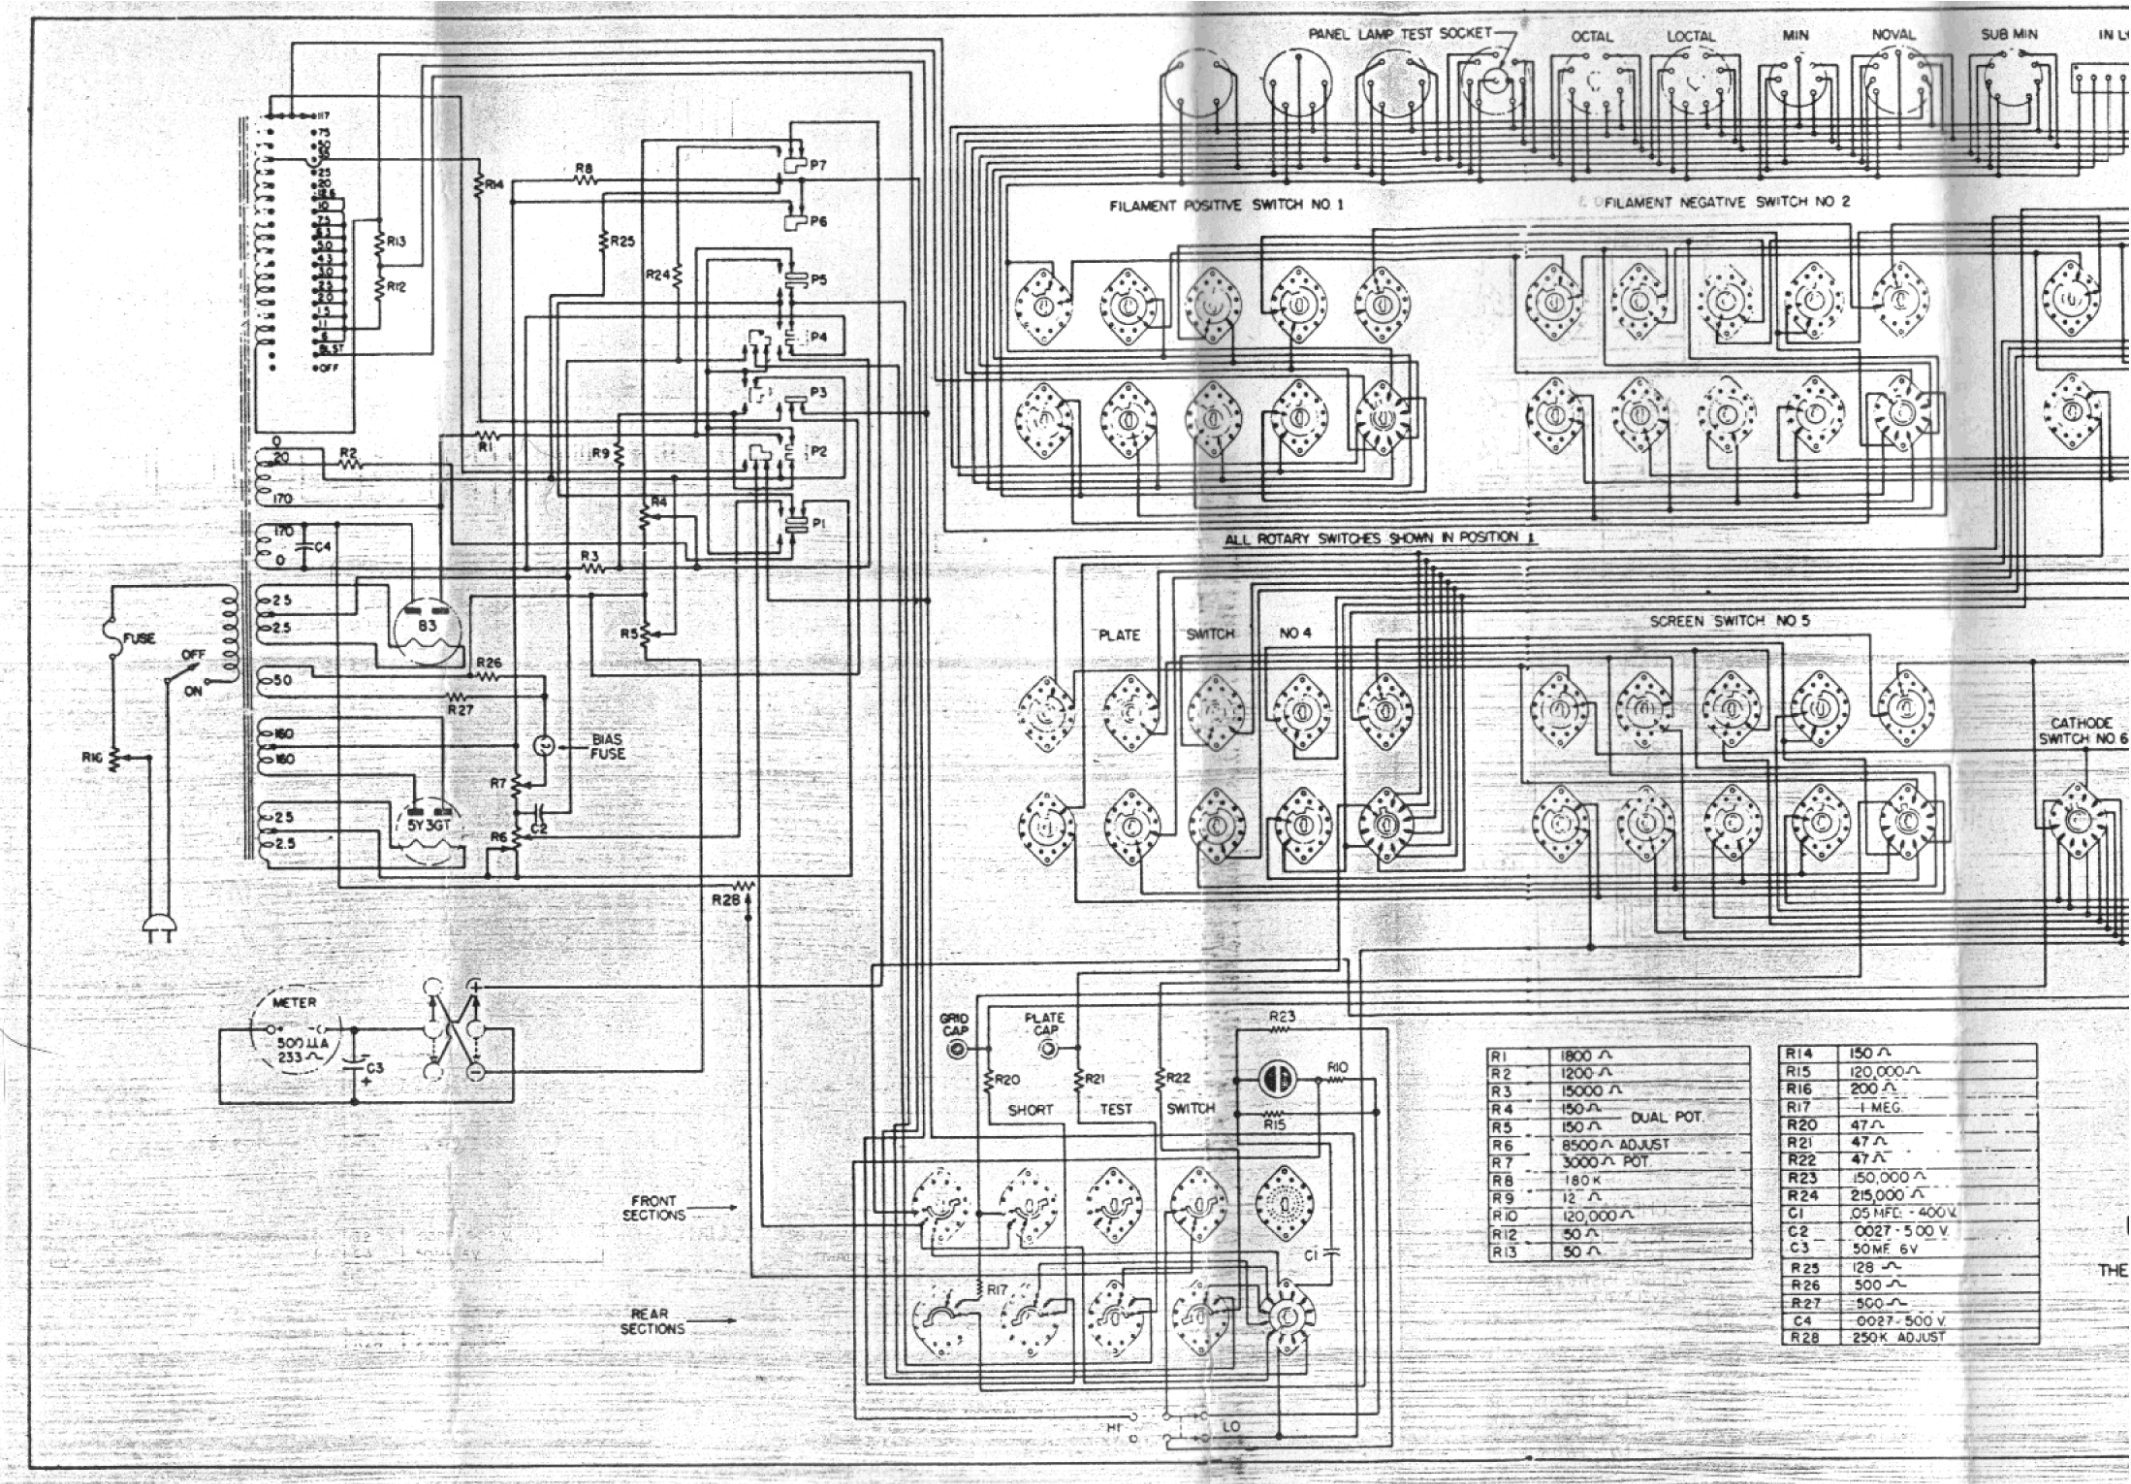

R1	1800 Ω
R2	1200 Ω
R3	15000 Ω
R4	150 Ω DUAL POT.
R5	150 Ω
R6	8500 Ω ADJUST
R7	3000 Ω POT.
R8	180 K
R9	12 Ω
R10	120,000 Ω
R12	50 Ω
R13	50 Ω

R14	150 Ω
R15	120,000 Ω
R16	200 Ω
R17	1 MEG.
R20	47 Ω
R21	47 Ω
R22	47 Ω
R23	150,000 Ω
R24	215,000 Ω
C1	.05 MFD. - 400 V.
C2	.0027 - 500 V.
C3	50 MF. 6V
R25	128 Ω
R26	500 Ω
R27	500 Ω
C4	.0027 - 500 V.
R28	250 K ADJUST

K4XL's BAMA

This manual is provided FREE OF CHARGE from the "BoatAnchor Manual Archive" as a service to the Boatanchor community.

It was uploaded by someone who wanted to help you repair and maintain your equipment.

If you paid anyone other than BAMA for this manual, you paid someone who is making a profit from the free labor of others without asking their permission.

You may pass on copies of this manual to anyone who needs it. But do it without charge.

Thousands of files are available without charge from BAMA. Visit us at http://bama.sbc.edu